



Scott® Pro™ Electronic Hard Roll Towel Dispenser

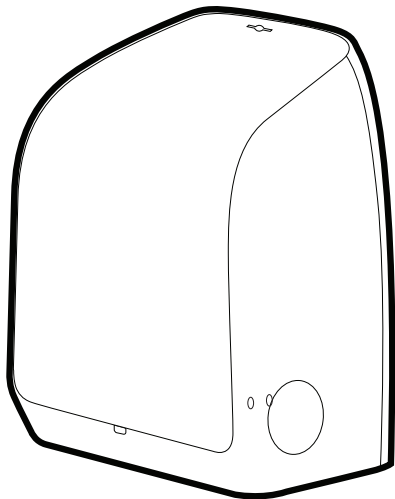

Depth = 9.18"

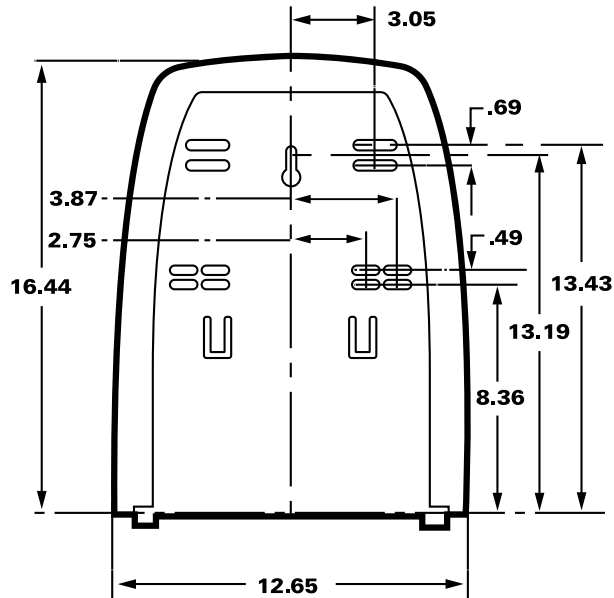

- Made of ABS plastic with smoked translucent sides and an opaque black back.
- Dispenses one 8" diameter roll of 7.5" wide towel plus stub roll utilizing core plug mounting.
- Features include two operational modes; hidden and hanging:
 - Hidden mode dispenses a single sheet of paper when the users' hand is placed beneath the dispenser.
 - In hanging mode a full sheet is exposed for the user to tear off and is automatically replenished following a short delay.
- Features also include three sheet length settings, two sensor sensitivity settings, electronic roll measurement for stub roll transfer notification and choice of key-activated spring lock or push button operation.
- Operates on four D size alkaline batteries or AC adapter (sold separately).
- One per case.

Product Codes:

29739 Faux Stainless	29738 White	29737 Black	35609 Faux Stainless	34349 White	34348 Black	35614 Faux Stainless	34369 White	34368 Black
--------------------------------	-----------------------	-----------------------	--------------------------------	-----------------------	-----------------------	--------------------------------	-----------------------	-----------------------

Suggested mounting height is 48" from the floor or 12" above a counter to the bottom of the dispenser.*
When installed properly and used with the corresponding product, this dispenser meets ADA Standard 28 CFR Part 36, local rules may vary.

*NOTE: Unless otherwise noted, suggested mounting height is the distance from the floor to the bottom of the dispenser.